

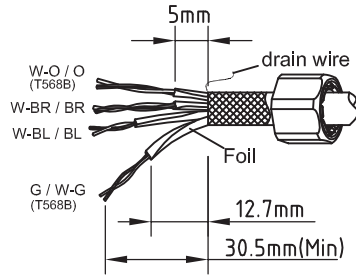
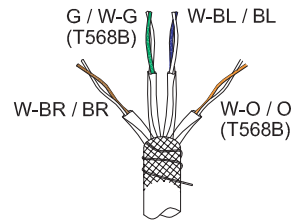
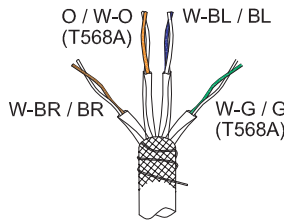



**Step 1:**  
Put cable through the Nut.  
(OD: 6-8 mm ; 22-26AWG)

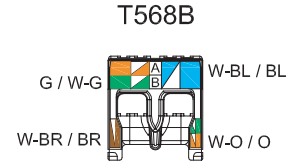


**Step 2:**  
1. Strip off cable jacket for at least 30.5 mm and retain 12.7 & 5 mm foil from cable end.  
2. Back cover the braid then wrap the drain wire on it.

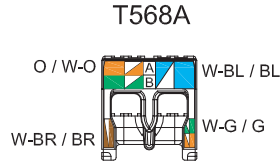


**Step 3:**  
Put wires through wire management in accordance with wiring color code.

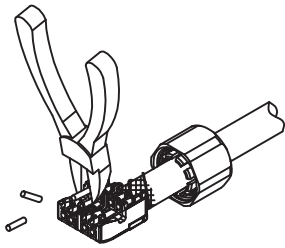

**Step 4:**  
Trim excess wires.

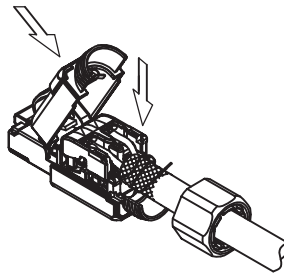


**Step 5:**  
Assemble the wire management. Then press the cover to engage with base housing.

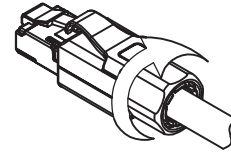


**Step 6:**  
Lock and tight the nut.


**DISASSEMBLY INSTRUCTION**

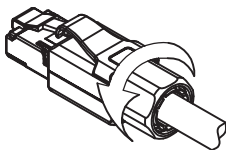

**Step 1:**  
Unlock the nut.

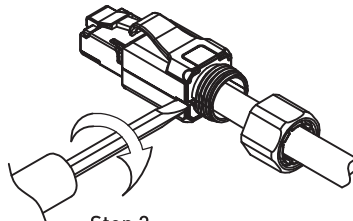

**Step 2:**  
Insert the slotted screwdriver into the slot and rotate to open the jaws.

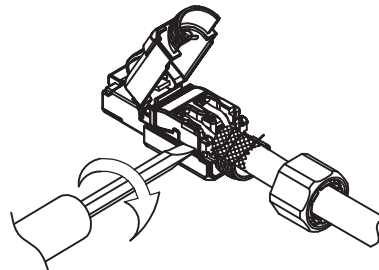

**Step 3:**  
Insert the slotted screwdriver into the slot and rotate to open the wire management.

120

180