



GGM TRJUC6A10GBK UTP 180° Toolless Keystone Jack Installation Instruction


Cable-Stripping

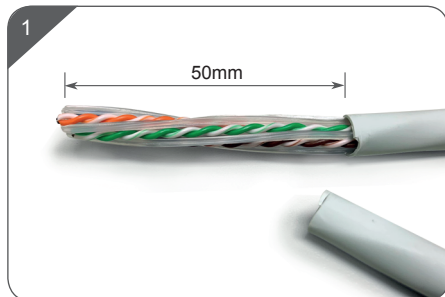


Wiring and cutting

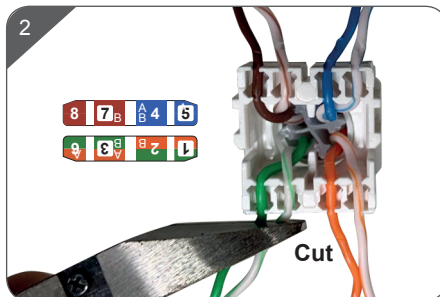


Groove and bulge

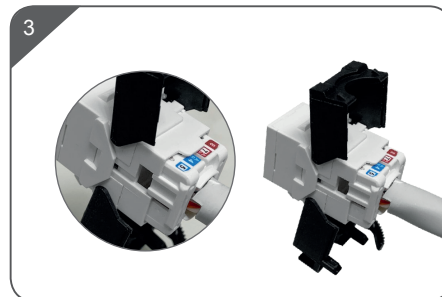

Close the top-cover and bottom-cover

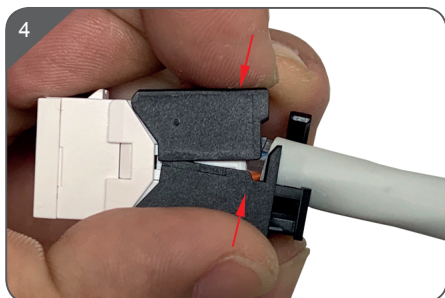

Press down the ratchet until tighten

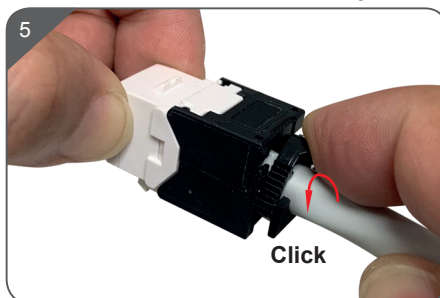

Complete termination

