


Instruction Manual

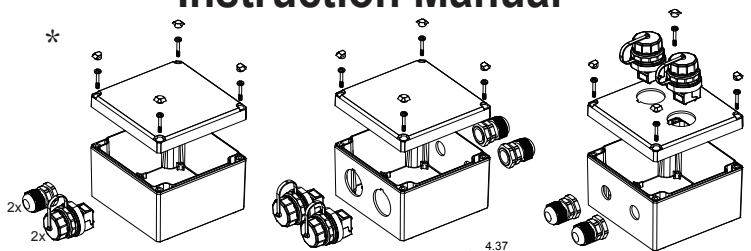


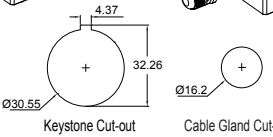

*1. Drill the holes on any sides of Box and remove excess debris. (For the box without pre-cut opening.)

2. Loosen the nut on waterproof cable gland and use it to fasten the waterproof cable gland into the holes of Box.
3. Box can be mounted to the wall or any fixed flat surface by using the self-tapping screws. The screws should be placed into the holes of each corner of the base and tighten with screwdriver.
4. Insert the cable through waterproof cable gland.

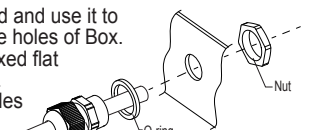

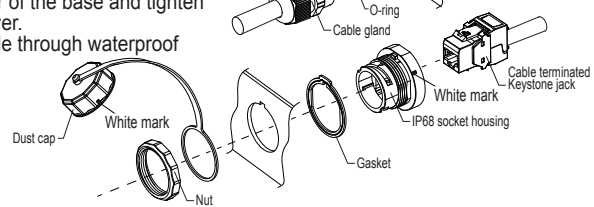

5. Complete the termination of Keystone jack. (Please refer to Page.2)
6. Place the Keystone jack with latch side aligned to " ↑ " on the IP68 socket housing. Snap the Keystone jack into IP68 socket housing.
7. Loosen the nut and tighten the IP68 socket housing into Box by screwing up the nut with dust cap. Ensure the nut is locked tightly.
   Remark: Make sure to place the blue gasket in between Box and housing properly.
8. Fasten the cable gland on Box to fix the cable.
9. Tighten screws on each corner of the cover to fix the cover on the base by screwdriver.

Precaution on secured sealing mating:
Featured White Alignment marks are used for quick alignment of the two interfaces for appropriate mating. When completely mated and locked, the White Alignment Mark on the plug must line-up with the center line of the connector (alignment mark on the receptacle) as shown to ensure the watertight sealed locking.